

INSTRUCTION MANUAL

Wooden Case Radio




MEWA
model 3388

Please read these instructions before use and retain for future reference
For household and indoor use only

1. SAFETY

- No naked flame sources such as lighted candles, should be placed on the apparatus.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device will remain readily operable.
- It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Use of power sources not expressly recommended for this equipment may lead to overheating, malfunction of the equipment, fire, electrical shock or other hazards. Use only the recommended power source.
- Ensure minimum distances of 5cm around the apparatus for sufficient ventilation. Do not place the product in closed bookcases or racks without proper ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- Do not use or store the equipment in humid or dusty area. Attention should be drawn to the use of apparatus in tropical and/ or moderate climates.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Marking plate is located at rear enclosure of the apparatus.
- This apparatus is intended for household and indoor use only.

2. PARTS

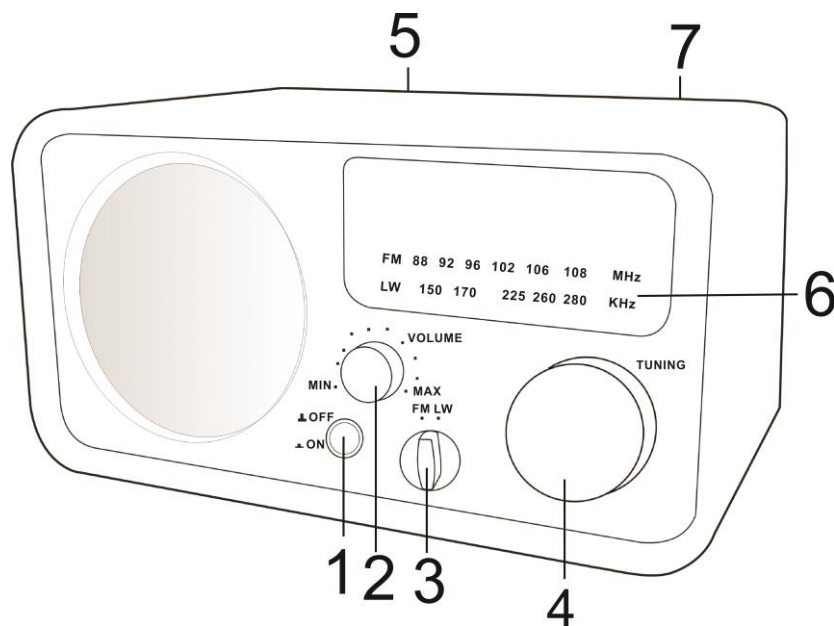

- | | | |
|--------------------|-------------------|---------------|
| 1. On/Off Button | 4. Tuning Control | 7. FM Antenna |
| 2. Volume Control | 5. AC cord | |
| 3. FM /LW Selector | 6. Dial Scale | |

3. MAINS OPERATION

Connect the plug of the cord to an AC outlet of the proper voltage and frequency specified on the back of the unit. Never attempt to connect it to other power sources because damage will result.

4. USING THE RADIO

- 4.1 Press the On/Off Button (1) to turn on the unit.
- 4.2 Set the FM/LW selector (3) to the required waveband.
- 4.3 Adjust the Volume Control (2) to the desired listening level.
- 4.4 Turn the Tuning Control (4) to select the frequency of desired station.
- 4.5 To turn off the unit, press the On/Off Button (1) once.

Note

- The built-in LW and the external FM antennas are directional. If tuning into a FM station extend or move the antenna (7) for a better reception. If tuning into an LW station rotate the whole unit after tuning to obtain the best reception.

5. CARE AND MAINTENANCE

Wipe external surfaces with a soft cloth. If the casing is very dirty, unplug from the mains supply and use a damp cloth soaked in a weak solution of washing up liquid and water. Allow to dry thoroughly before reusing.

6. TECHNICAL SPECIFICATION

Power source	AC 230V~ 50Hz, 10W
Power consumption (off mode)	< 0.5W
Radio frequency	LW 150 – 280 kHz FM 88 – 108 MHz
Operating conditions	Temperature: 5°C to 35°C Humidity: 5% to 90%



Electrical products should not be disposed of with household waste.

Thank you to recycle collection points provided for this purpose.



Consult with your local authorities or dealer for advice on recycling.

Due to continuous product development, design and specifications are subject to change without notice.